

Basic

Before you start cooking with your Thermomix, there are some basic guidelines you should keep in mind. In this Thermomix “1x1” you can learn more about how the Thermomix should be placed, what you need to know about the green sealing ring and much more.

With the Thermomix 1x1 it doesn't take much time to become a Thermomix expert.



HANDLE WITH CARE: Take care when cooking with Thermomix and make sure that novice users are supervised or instructed in the use of Thermomix. Always take care and keep children away when using the Thermomix.



USE GREEN SEALING RING (TM31): Always use your Thermomix TM31 with the green sealing ring only, properly fitted in the lid of the mixing bowl. If you don't have a green sealing ring, contact your Vorwerk customer service in order to exchange your grey sealing ring with the new green one.



REMEMBER TO REPLACE: The sealing ring (only TM31) should be replaced every two years or in case of damage or leakage. Only use original Vorwerk Thermomix accessories. The use of a sealing ring older than 2 years affects the safety functions of the Thermomix.



FOR FOOD ONLY: Thermomix is a cooking appliance intended to be only used for food preparation.



KEEP HOUSING DRY: Do not immerse the Thermomix housing in water. Make sure no water, liquid or solid food enters the housing. Clean housing only with a damp cloth. Disconnect the Thermomix from the main power supply before cleaning.



CHECK IT OUT: Check your Thermomix and accessories such as the connecting cable, the mixing bowl, the lid or the lid sealing ring (only TM31) for possible damage every time before using. Use only if undamaged and parts fit correctly.



SHARP DESIGN: The blades of the mixing knife are very sharp. Only hold the upper part of the mixing knife when removing or re-inserting it. Do not touch the mixing knife when Thermomix is in operation.



FIND THE RIGHT POSITION: Place your Thermomix on a clean, solid, even and non-heated surface so it cannot slip. Do not place the Thermomix on a cooking plate as it may catch fire in case of being heated.



IT MOVES: Keep your Thermomix at a sufficient distance from the edge of the surface because occasionally when kneading dough or chopping food, Thermomix may move. Please observe the machine at any time while operating.

Find more information online on www.info.thermomix.com.au