

Accessory

It is the right accessories that make the difference in life – also true for your Thermomix. In this Thermomix “1×1” you can learn how to safely and correctly use your accessories. With the Thermomix 1×1 it doesn’t take much time to become a Thermomix expert.



USE GREEN SEALING RING: Always use your Thermomix TM31 only with the green sealing ring in the lid of the mixing bowl. If you don’t have a green sealing ring, contact your Vorwerk customer service in order to exchange your grey sealing ring with the new green one.



OPEN CAREFULLY: Open the mixing bowl lid with care – never try to force it open. For TM31 only: Only open the lid when the processed food has stopped moving and the speed selector is pointing to “lid open” position. For TM5 only: Open the lid only when the speed is set to “0” and the locking mechanism has released it.



AVOID FAKE COPIES: Only use original parts or accessories provided with and designed for your Thermomix.



LOCK PROPERLY: Make sure that all corresponding parts are properly locked and correctly positioned as intended. That applies to (a) mixing knife, mixing knife sealing ring, mixing bowl and mixing bowl base (b) mixing bowl, mixing bowl lid, lid sealing ring and measuring cup and (c) mixing bowl, mixing bowl lid, lid sealing ring and Varoma.

Find more information online on www.info.thermomix.com.au